




ANLY PHOTO SENSOR

PHOTO SENSOR



TYPE SELECTION :

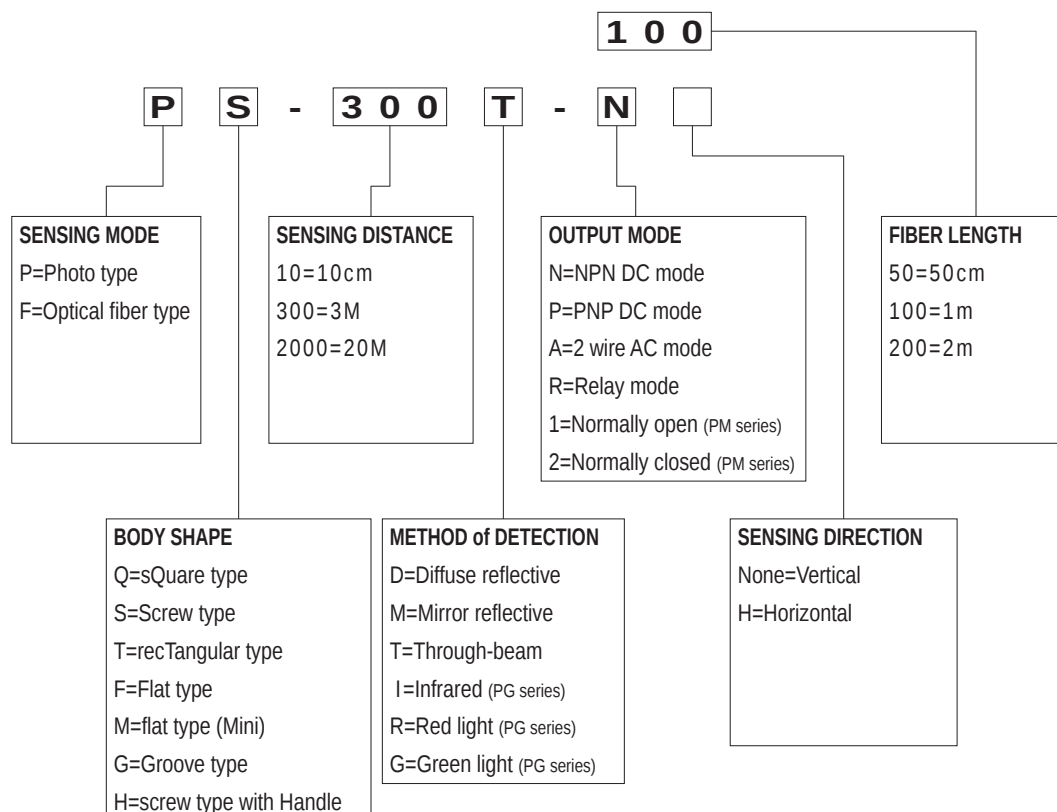


GENERAL DATA :

PS-40D-H series  DC 10 ~ 30V Sensing distance: 40cm Switching frequency: 80Hz	PS-300M-H series  DC 10 ~ 30V Sensing distance: 3m Switching frequency: 60Hz	PS-2000T-H series  DC 10 ~ 30V Sensing distance: 20m Switching frequency: 60Hz	PS-10D series  DC 10 ~ 30V Sensing distance: 10cm Switching frequency: 80Hz	PS-30D series  DC 10 ~ 30V Sensing distance: 30cm Switching frequency: 80Hz
PS-300M series  DC 10 ~ 30V Sensing distance: 3m Switching frequency: 60Hz	PS-2000T series  DC 10 ~ 30V Sensing distance: 20m Switching frequency: 60Hz	PF-100D-R series  AC/DC 24 ~ 240V Sensing distance: 1m Switching frequency: 30Hz	PF-200D-R series  AC/DC 24 ~ 240V Sensing distance: 2m Switching frequency: 30Hz	PF-300M-R series  AC/DC 24 ~ 240V Sensing distance: 3m Switching frequency: 30Hz
PF-500M-R series  AC/DC 24 ~ 240V Sensing distance: 5m Switching frequency: 30Hz	PF-700M-R series  AC/DC 24 ~ 240V Sensing distance: 7m Switching frequency: 30Hz	PF-1000T-R series  AC/DC 24 ~ 240V Sensing distance: 10m Switching frequency: 30Hz	PF-2000T-R series  AC/DC 24 ~ 240V Sensing distance: 20m Switching frequency: 30Hz	PT-15D series  DC 10 ~ 30V Sensing distance: 15cm Switching frequency: 100Hz
PT-30D series  DC 10 ~ 30V Sensing distance: 30cm Switching frequency: 100Hz	PT-200M series  DC 10 ~ 30V Sensing distance: 2m Switching frequency: 80Hz	PT-200T series  DC 10 ~ 30V Sensing distance: 2m Switching frequency: 80Hz	FS-05T series  Fiber (φ1.0) Conjunction with AU-F01/02 Sensing distance: 5cm	FS-15T series  Fiber (φ2.2) Conjunction with AU-F01/02 Sensing distance: 15cm
FH-05T series  Fiber (φ1.0) Conjunction with AU-F01/02 Sensing distance: 5cm	FH-15T series  Fiber (φ2.2) Conjunction with AU-F01/02 Sensing distance: 15cm	FS-01D series  Fiber (φ1.0 x 2) Conjunction with AU-F01/02 Sensing distance: 1.2cm	FS-04D series  Fiber (φ2.2 x 2) Conjunction with AU-F01/02 Sensing distance: 4cm	FH-01D series  Fiber (φ0.8 x 2) Conjunction with AU-F01/02 Sensing distance: 1.2cm
FH-04D series  Fiber (φ2.2 x 2) Conjunction with AU-F01/02 Sensing distance: 4cm	AU-F04  DC 10 ~ 30V Switching frequency: 1kHz	PM-10D series  DC 10 ~ 30V Sensing distance: 10cm Switching frequency: 100Hz	PM-40D series  DC 10 ~ 30V Sensing distance: 40cm Switching frequency: 100Hz	


PM-200M series  DC 10 ~ 30V Sensing distance: 2m Switching frequency: 80Hz	PM-200T series  DC 10 ~ 30V Sensing distance: 2m Switching frequency: 80Hz	PQ-10D-H series  DC 10 ~ 30V Sensing distance: 10cm Switching frequency: 80Hz	PQ-100M-H series  DC 10 ~ 30V Sensing distance: 1m Switching frequency: 60Hz	PQ-100T-H series  DC 10 ~ 30V Sensing distance: 1m Switching frequency: 60Hz
PG-06 series  DC 10 ~ 30V Sensing distance: 6mm Switching frequency: 60Hz				

CONNECTION :

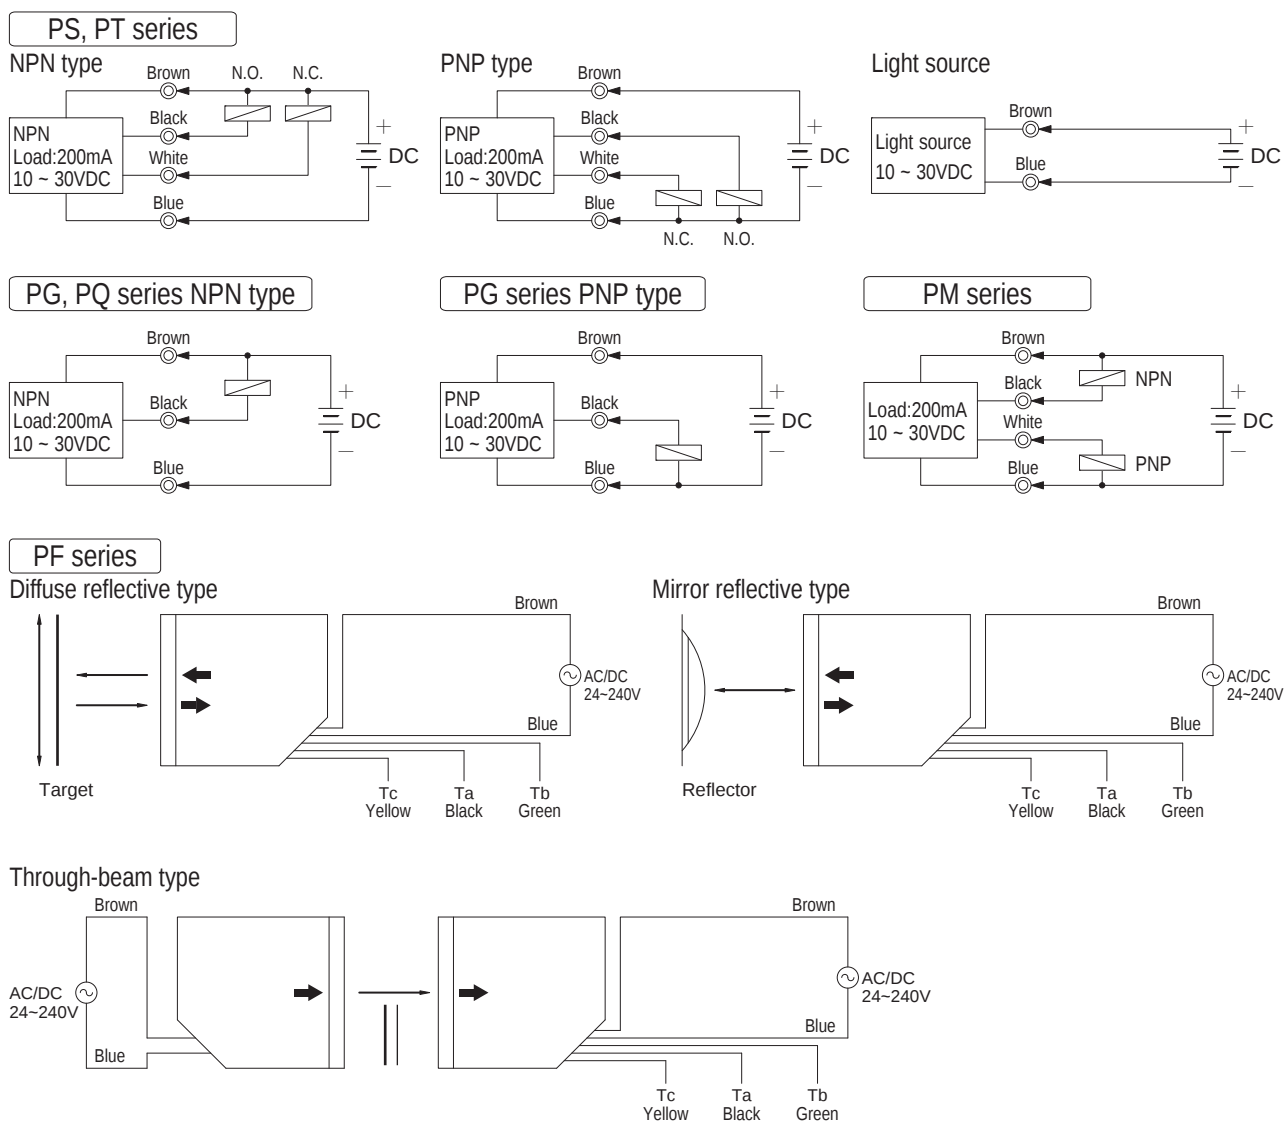



DIMENSIONS : (mm)

PS series

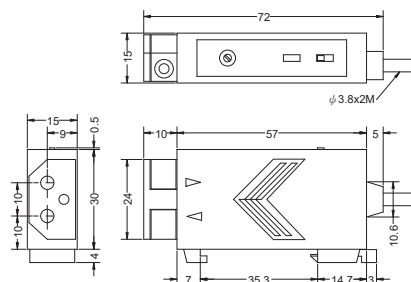

	A	B	C	D	E	F	G
FS-05T	$\phi 2.5$	17	500	$\phi 1.0$	M3 x 0.5	--	--
FS-15T	$\phi 3.2$	17	500	$\phi 2.2$	M4 x 0.7	--	--
FS-01D	$\phi 2.5$	17	500	$\phi 1.0 \times 2$	M4 x 0.5	--	--
FS-04D	$\phi 5.2$	17	500	$\phi 2.2 \times 2$	M6 x 0.75	--	--
FH-05T	$\phi 2.5$	17	500	$\phi 1.0$	M4 x 0.5	82	$\phi 1.7$
FH-15T	$\phi 3.2$	17	500	$\phi 2.2$	M4 x 0.7	40	$\phi 1.7$
FH-01D	$\phi 2.5$	17	500	$\phi 1.0 \times 2$	M4 x 0.5	85	$\phi 1.7$
FH-04D	$\phi 5.2$	17	500	$\phi 2.2 \times 2$	M6 x 0.75	85	$\phi 2.5$

FH series

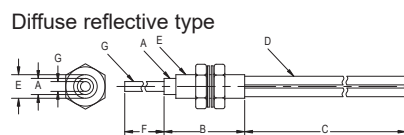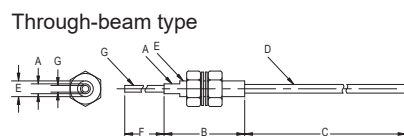

ONLY ELECTRONICS CO., LTD.

<http://www.anly.com.tw>

No.19, Lane 202, Fushou St., Xinzhuang Dist., New Taipei City 242, Taiwan

TEL: +886-2-2996-3202 FAX: +886-2-2996-2017

Flat K, 13/F, Edward Mansion, 141 Prince Edward Road W., Kowloon, Hong Kong

TEL: +852-2397-2505 FAX: +852-2397-6080

: ONLY TECHNOLOGY (WUXI) CO., LTD.

2F, Building A, Plot 1, No. 28, Zhanhong Rd., Xinwu Dist., Wuxi, Jiangsu, P.R.China

TEL: +86-510-85304801~3

JUSTY ELECTRONICS (M) SDN. BHD.
No.1, Jalan 6/89B, Kawasan Perindustrian Trisegi, Batu 3 1/2 Off Jalan Sungei Besi, 57100 Kuala Lumpur, Malaysia

TEL: +60-3-7983-5758 FAX: +60-3-7981-5052

PT. ANLY ELECTRONICS INDONESIA
Jl. Pangeran Jayakarta 117/B9, Jakarta Pusat, 10730 Indonesia

TEL: +62-21-624-8436 FAX: +62-21-626-1228

NO. APSO-W-A